


## E Key

For opening the lock without code.

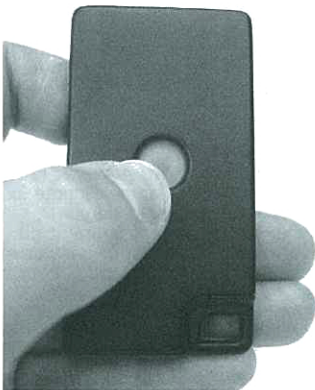

With the help of the E Key it is possible to handle different functions:

- 1. Door opening:** Press the key once, the green light flashes on.
- 2. Automatic mode:** Press the key for 6sec, the green light flashes on two times. In the automatic mode it is possible to open the door by pressing the ON Key at the input unit only if the E Key is in radio range. In the automatic mode the green light flashes. After 15min the automatic mode turns off automatically or with pressing the key for a further 6sec. manually.
- 3. Programming mode:** Press the key for 15 sec, the green light flashes three times. The programming mode has two functions: First you can store the E Key in the programming unit for unlocking the doors and second you can synchronise the radio channel of the E Key with the input unit. (see menu E Key Synchr.)

If the red light flashes you have to change the battery (CR 2032). After changing the battery it has to be initialized by pressing the key several times.

We would recommend batteries with flat surfaces.