




# Combination Padlock Instructions


[www.burgsecurity.com.au](http://www.burgsecurity.com.au)

1. Unlock padlock using factory set code:  
0-0-0 for 3 digit locks.  
0-0-0-0 for 4 digit locks.
2. Rotate Shackle 180°.
3. Hold Shackle down and set new code.
4. Lock Padlock.

Werkseinstellung  
0000-oder  
alter Code  
Factory 0000  
or old code

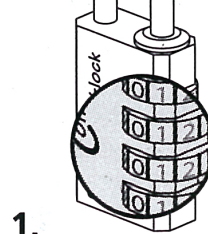


1.

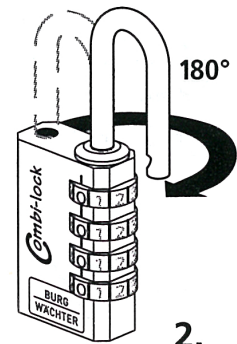


2.

Neuer Code  
New code

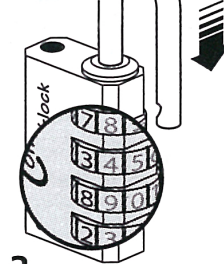

3.

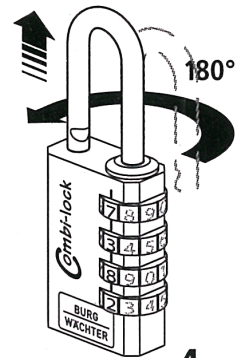

4.

These instructions apply to the following products:

- 80-15 M - 3 Digit
- 80-20 M - 3 Digit
- 80-30 M - 3 Digit
- 80-40 M - 4 Digit
- 90-20 M - 3 Digit
- 90-30 M - 3 Digit
- 90-40 M - 4 Digit